 





This instruction supersedes the frontal fixing section of the L Corner Instruction supplied with the unit

170° Hinges

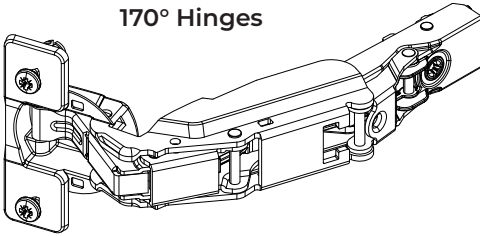


 Folding Door Hinges

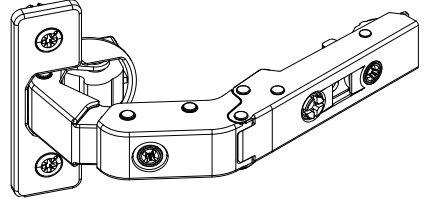

### Step 1.

 Position the frontal with 4 x cup holes on a protected work surface with the holes facing up. Insert the Folding door hinges and 170° hinges into the hinge holes provided. Position the 170° hinges on the side of the door that will be attached to the unit. Secure the hinges using the screws already located in the hinges.

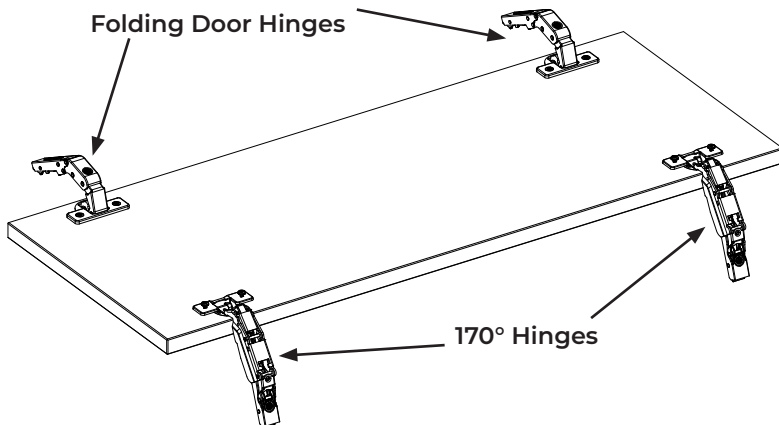


### Step 2.



Position the second door on a protected work surface with the holes facing up.

Attach the hinge plates to the frontal using the indentations on the side that will interact with the folding door hinges.

 Secure the hinge plates to the frontal using the screws already located in the hinge plates.

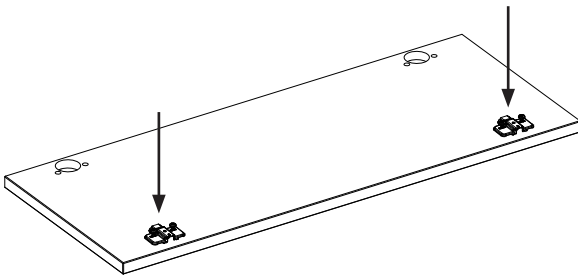




Hinge Plate

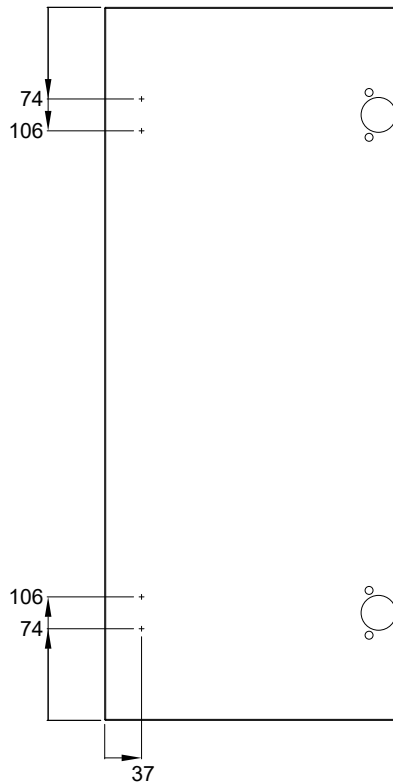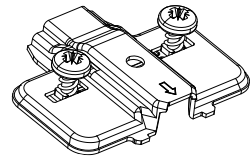  

### Step 3.

Attach the frontal with the 170° hinges to the L corner cabinet, clip the hinges onto the hinge plates and click to secure.

   Attach the frontal with the hinge plates to the folding door hinges, clip the hinges onto the hinge plates and click to secure.

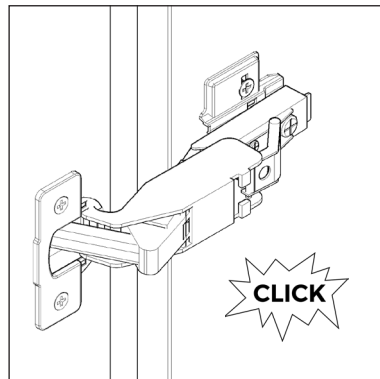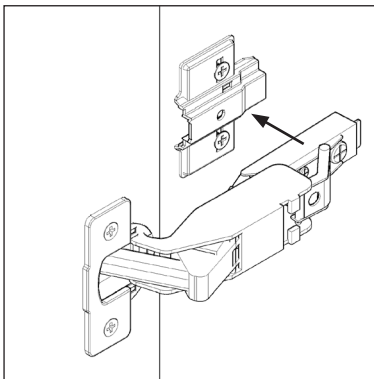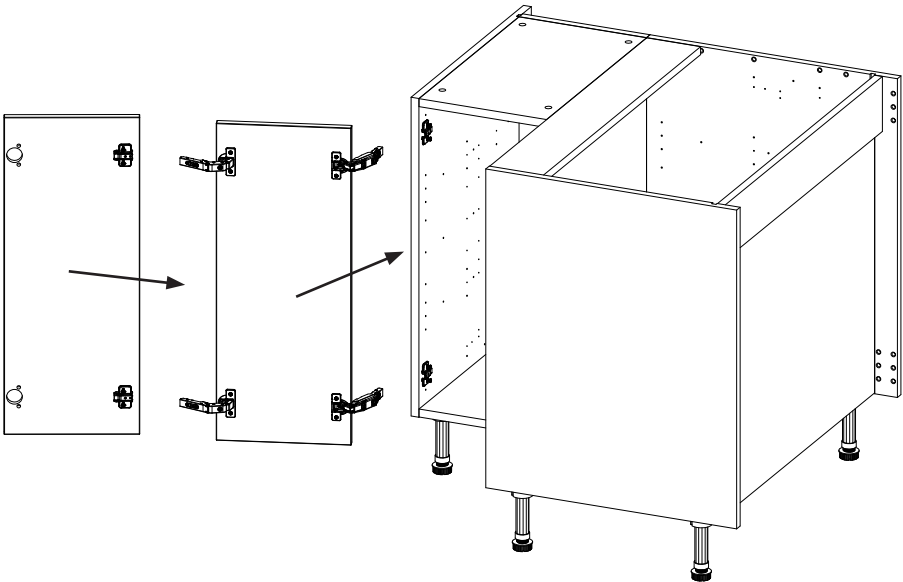

### Hinge Adjustment

Adjust hinges to suit, using the highlighted screw(s) shown.

