



FRONTÄLS

INFINITY PLUS Attachment Guide


INFINITY PLUS

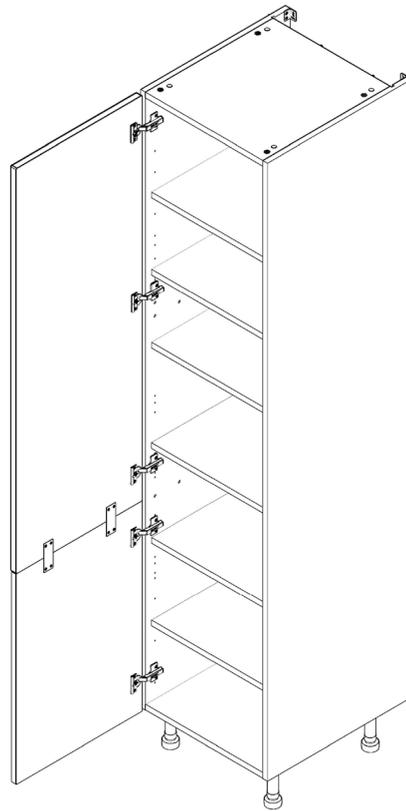

Tower

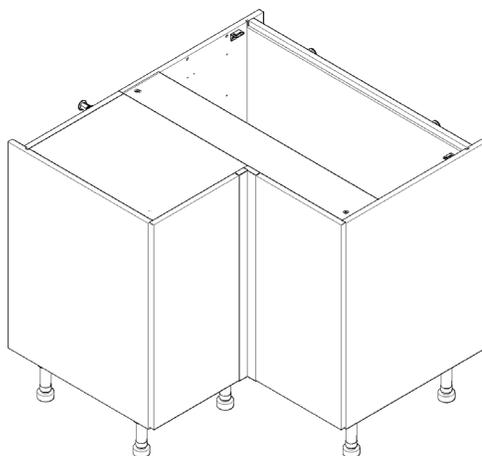

L Corner

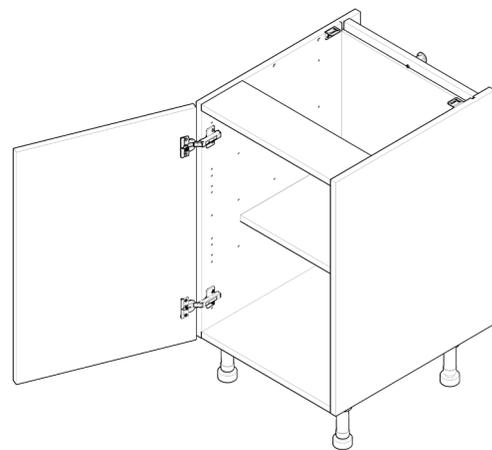

Door




FRONTALS

INFINITY PLUS Attachment Guide


DOOR WITH HINGE

For frontals with cabinet mechanisms, see specific mechanism instructions for frontal attachment guidelines.

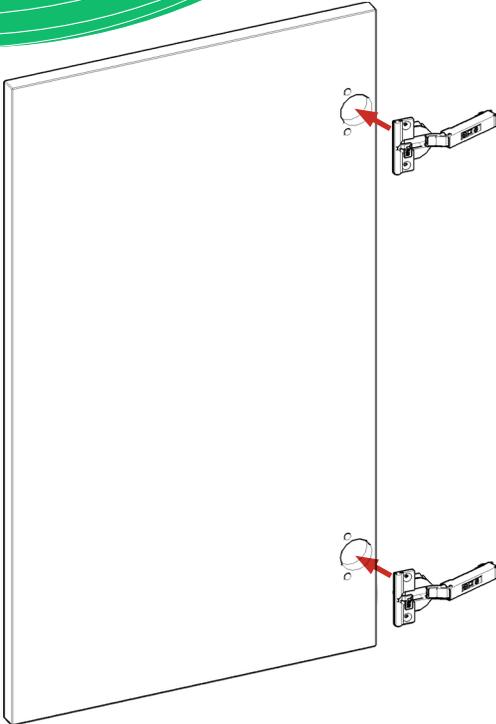


Step 1.
Insert hinge where required in holes as shown.

Step 2.
Secure hinges by tightening 2 x screws with hinge dowels attached. These are already positioned within the hinges.

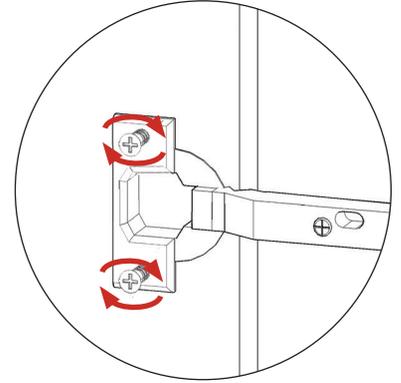


Step 3.
Attach the door to unit, clip hinge onto hinge plate and click to secure.

Step 4.
Adjust hinge to suit. As shown below.

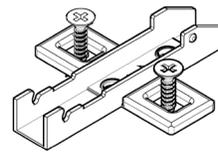

Hinge Plates

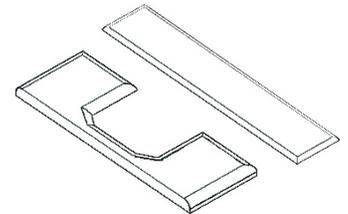

Hinge Cover Caps


FRONTAL HINGE ADJUSTMENT

To **adjust** hinge using a screw driver, tighten or loosen as required at points **1 & 2**.
Point **1** - left - right
Point **2** - side - side

To **Move** the hinge up/down, loosen screws A + B, manoeuvre the door, then re-tighten the screws


To **Release** door Pull catch as shown, to release hinge from the hinge plate.

View from Inside of Carcass

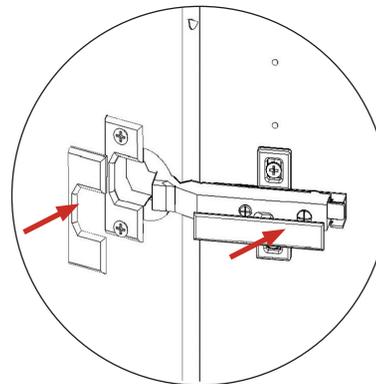


Step 5.
Fit cover caps to hinge.

Softclose Adjustment

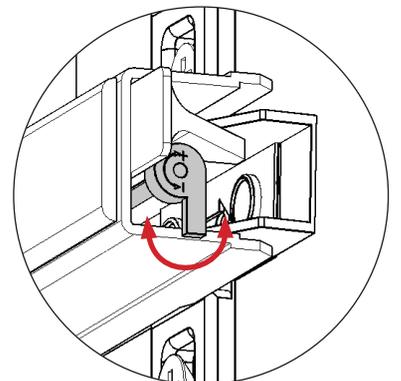


The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**

L CORNER DOOR

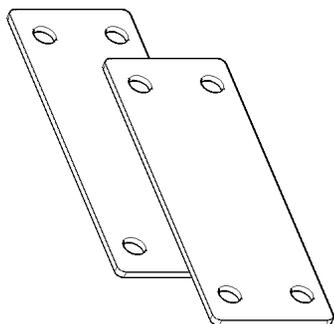

Fixing Plates

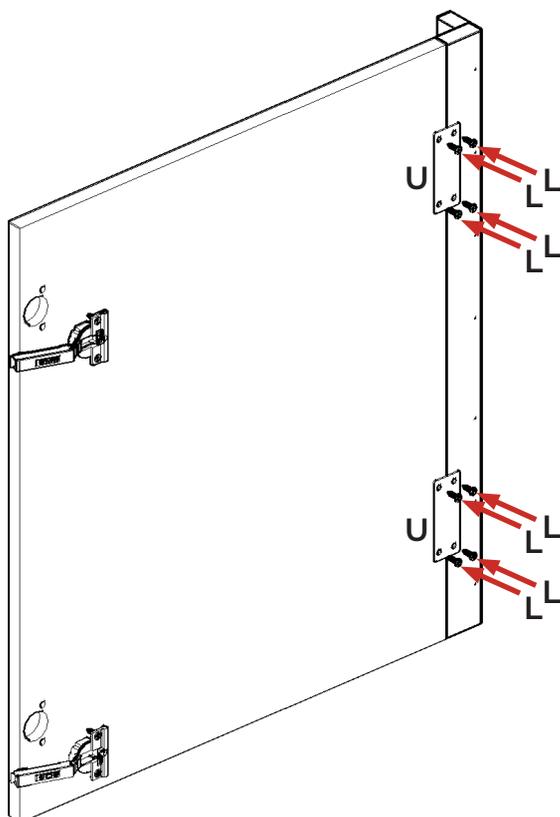

Step 4.

Adjust hinge to suit.

For hinge adjustability see page 1, step 4.

FRONTALS

INFINITY PLUS Attachment Guide

Step 1.

Align door & corner post.

Join together using 2 x fixing plates **(U)**

(equally spaced) on the back of both frontals.

Ensure a $\frac{1}{8}$ " gap is maintained between each frontal and that they are flush on the top and bottom once fixed together.

Screw in place using 4 x $\frac{9}{16}$ " screws **(L)** per fixing plate **(U)**.

Step 2.


Insert hinge where required in holes as shown.

Step 3.

Secure hinges by tightening

2 x screws with hinge dowels attached.

These are already positioned within the hinges.

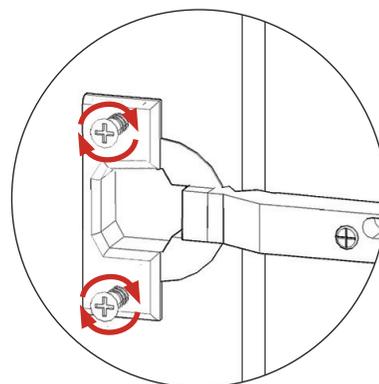

MULTI-DOOR JOINING

For frontals with cabinet mechanisms, see specific mechanism instructions for frontal attachment guidelines.





Step 1.

Insert hinge where required in holes as shown.

Step 2.

Align doors & frontal toe kick (if applicable). Join together using 4 x fixing plates (**U**) on the back of the frontals.


Ensure a 1/8" gap is maintained between each frontal once fixed together. Screw in place using 4 x 3/16" screws (**L**) per fixing plate (**U**).

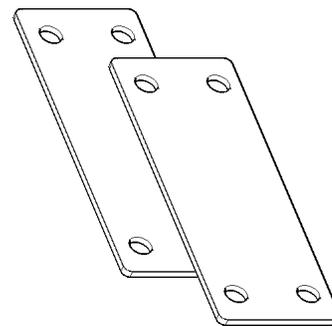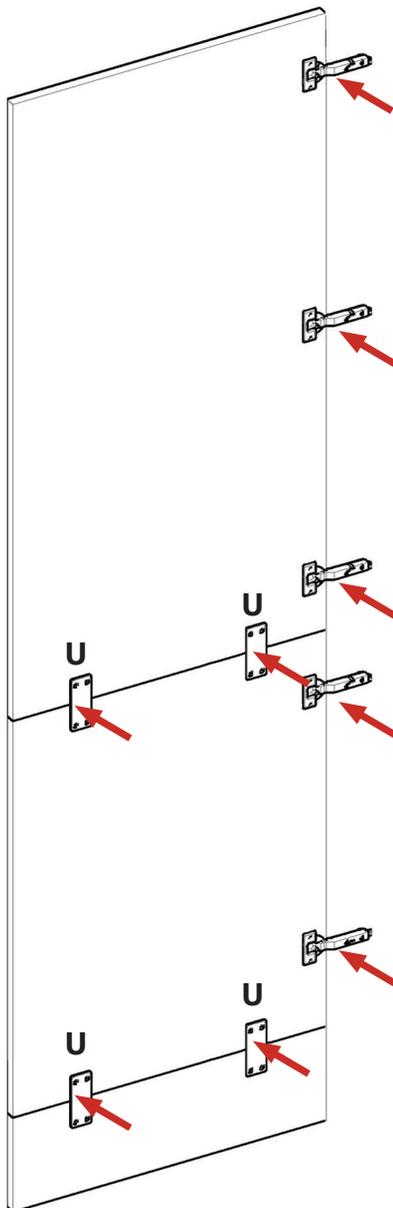

Fixing Plates

Step 3.

Secure hinges by tightening 2 x screws with hinge dowels attached. These are already positioned within the hinges.

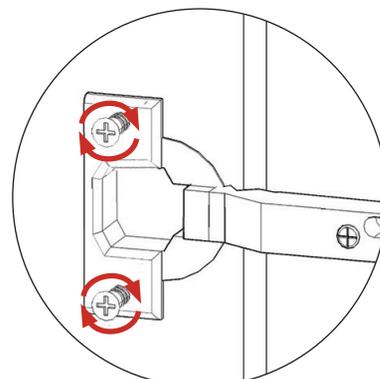

Step 4.

Adjust hinge to suit.

For hinge adjustability see page 1, step 4.