TOWER UNIT

84”, 90” & 96”
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

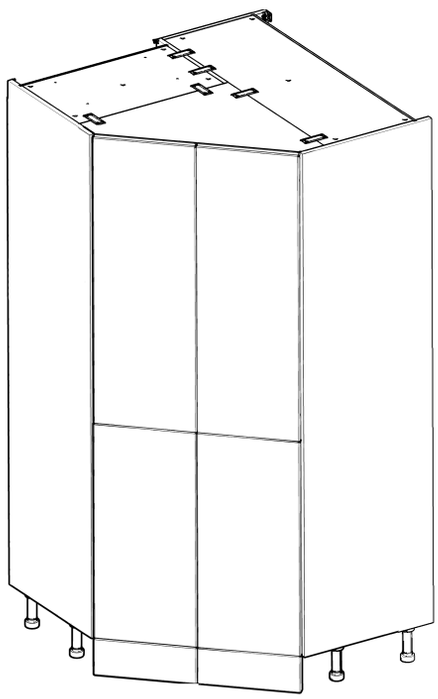

96” x 24”

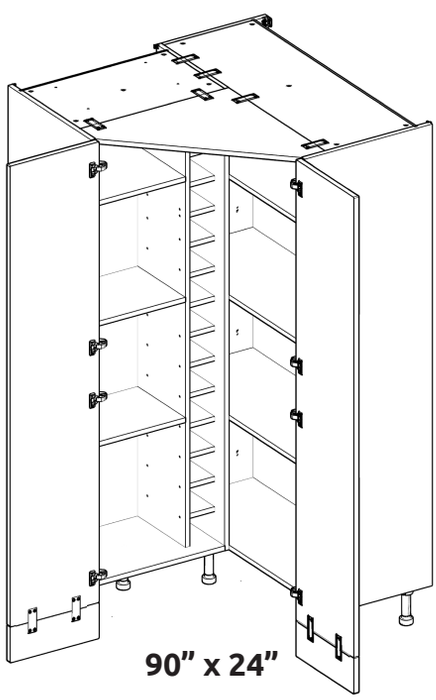

90” x 24”

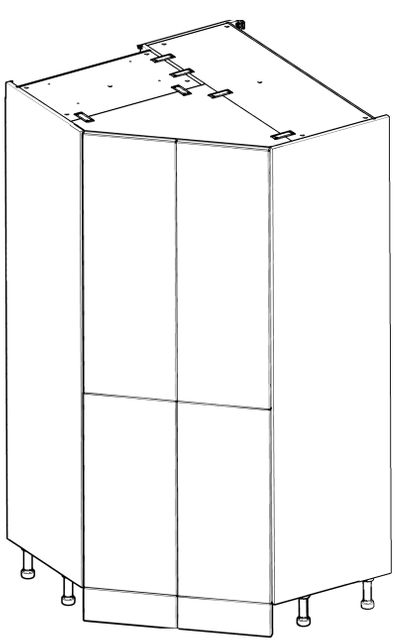

84” x 24”

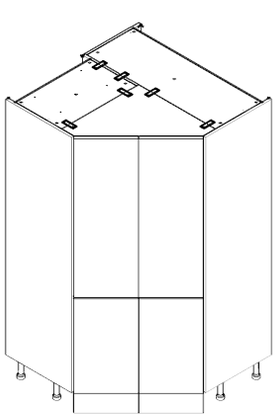

70/30 Door

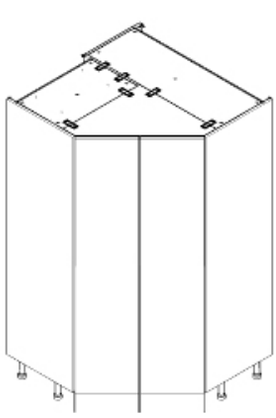

2 Door

wren KITCHENS

TOWER UNIT

84”, 90” & 96”
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

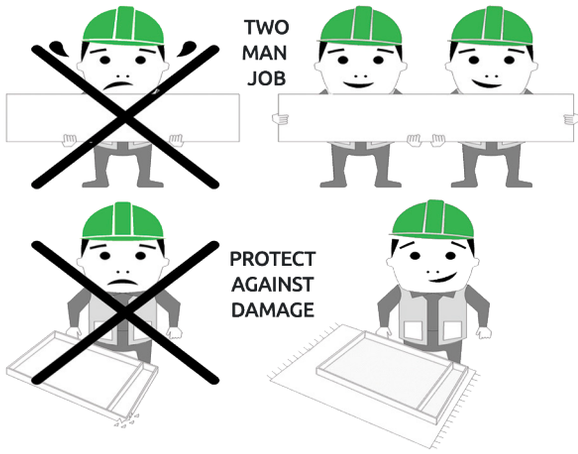

BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.

THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

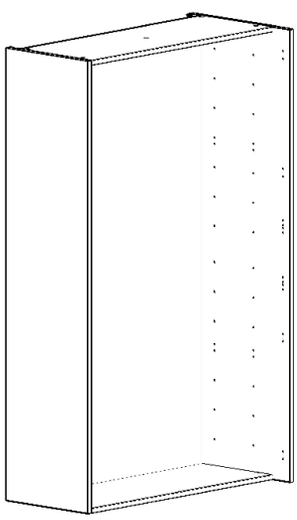

Carcase RH
Right Hand

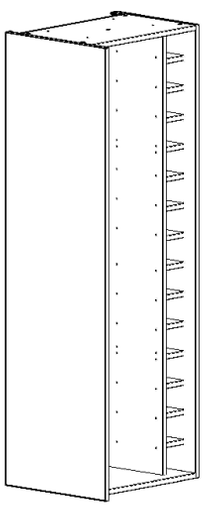

Carcase LH
Left Hand

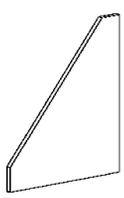

Panel (Z)
x1 Top Panel

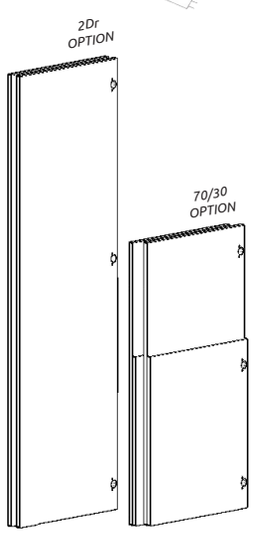

Frontals
2Dr or 70/30
(Packed Seperately)

Frontal Toe Kick
x2

Cabinet Toe Kick
x1

Legs
x10

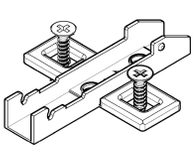

Hinge Mounting Plate
Inc Screws

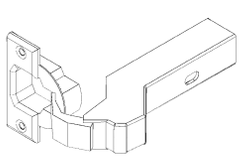

Hinge
Inc Screws

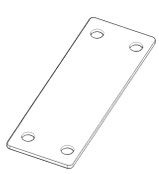

Fixing Plate (Ff)
x19

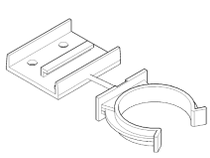

Toe Kick Attachment



(K) L Bracket LGE
x4



(J) L Bracket SML
x6



(S) Door Buffer
x4



(H) x6
1 1/4”
Screw



(B) x142
5/8”
Screw



(O) Metal Shelf Peg
x56

REQUIRED TOOLS

NOT to be used with CAM DOWEL & CAM LOCK

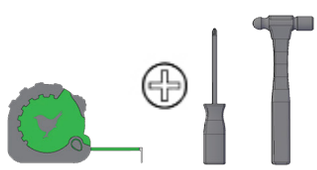

TOWER UNIT

84", 90" & 96"
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

Step 1.

Lay both carcases **LH** & **RH** flat as shown.
Secure 5 x fixing plate **(Ff)** positioned onto outside face of panel **(Y)** of carcase **RH** equally spaced using 2 x 5/8" screws **(B)** as shown.

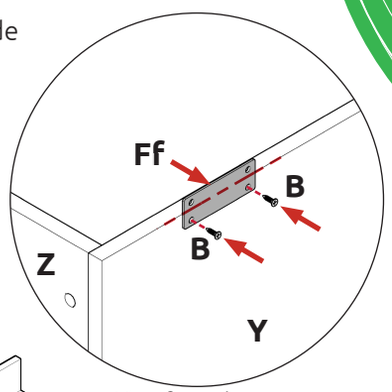

View from above
Carcase **RH**

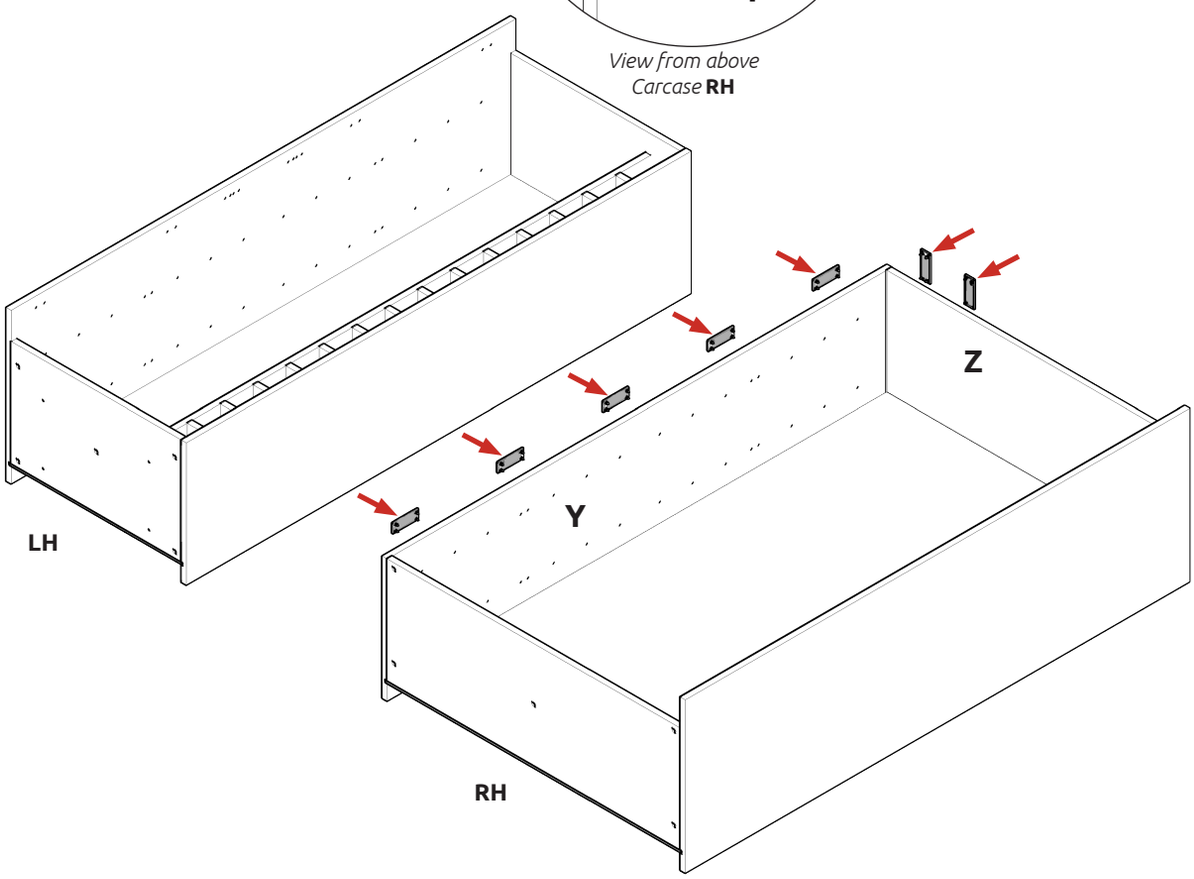

Step 2.

Using 2 x 5/8" screws **(B)** per plate secure 2 x fixing plate **(Ff)** positioned onto outside face of panel **(Z)** of carcase **RH** using measurements shown.

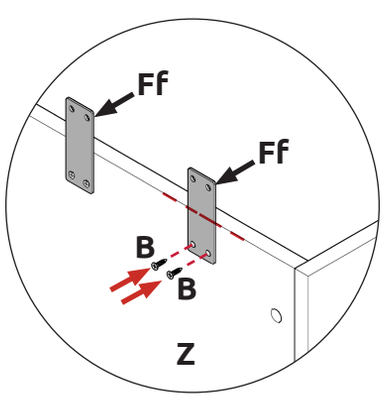

View from above
Carcase **RH**

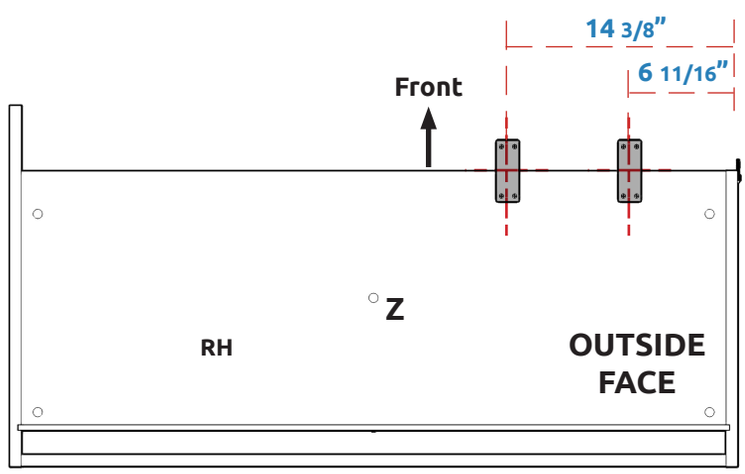

View from Above

Fixing Plate diagram

For Internal Use: CON.INS.004.001_50-WKIN00007_TOWER45WineRack_Assembly_Rev3.indd

TOWER UNIT

84”, 90” & 96”
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

Step 3.
Secure leg base into place with
2 x 5/8” screws **(B)** per leg as shown.

Ensure legs are rotated to also provide support to the end panels **(Y)**.

Front legs should have flat edge to the front.

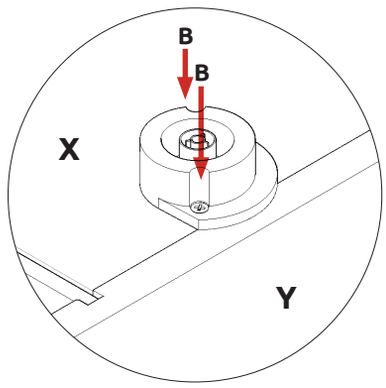

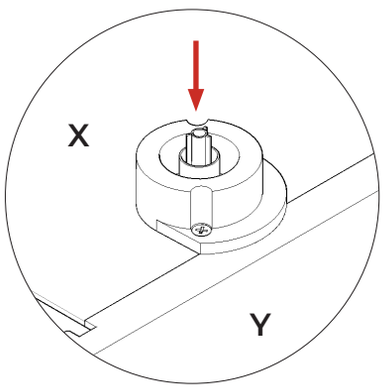

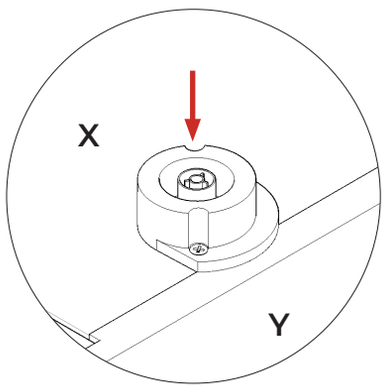

Step 4.
Lightly hit centre peg of leg base with hammer until flush.

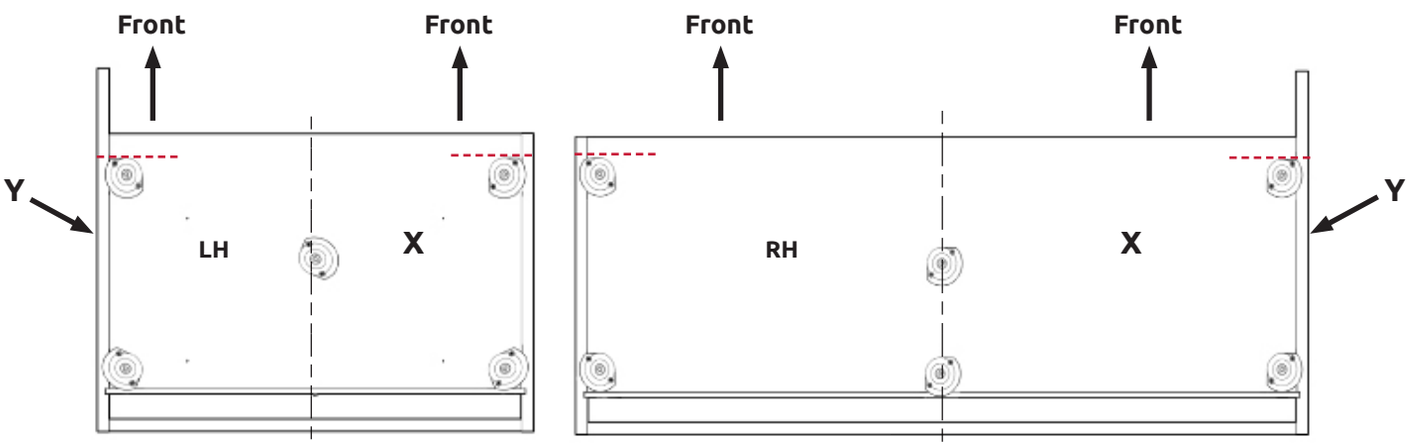

View From Underside

Leg position diagram

Step 5.
Push leg firmly down into leg base.
Adjust legs to 4 1/2” before turning both carcase upright.
Once in situ level accordingly.

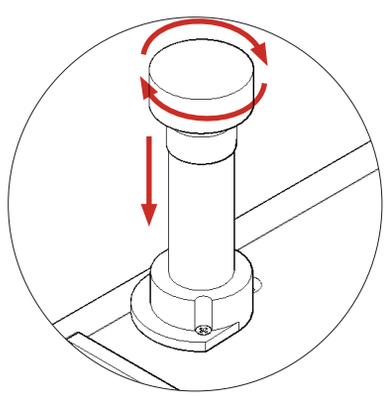

It is **important** to lift unit onto its legs. Do not tilt as depicted in image.

For Internal Use: CON.INS.004.001_50-WKIN00007_TOWER45WineRack_Assembly_Rev3.indd

Step 6.
Position carcase **LH** and carcase **RH** together as shown.

Ensure carcases are flush & square.

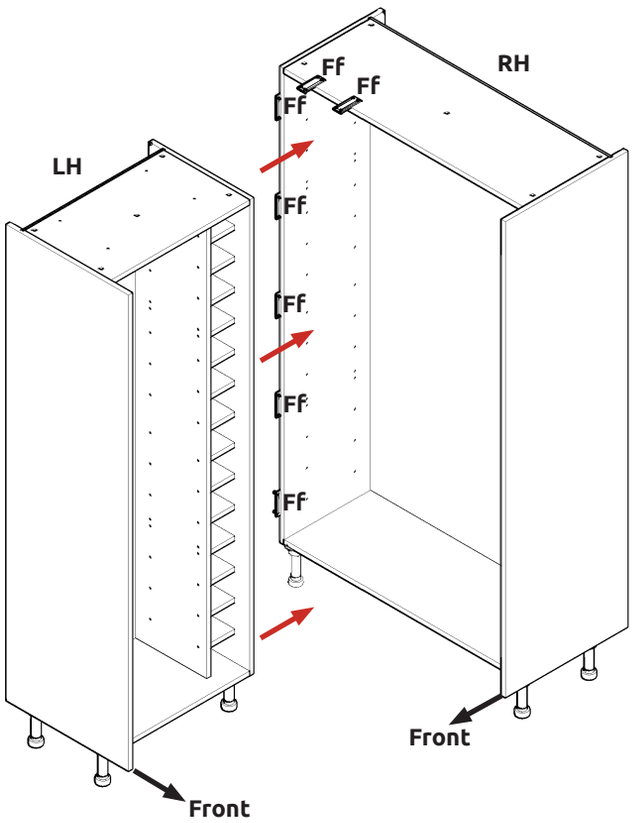

Step 7.
Screw through fixing plate **(Ff)** into adjoining carcase **LH** using 2 x 5/8" screws **(B)** to secure both carcases together.
Repeat per fixing plate **(Ff)**.

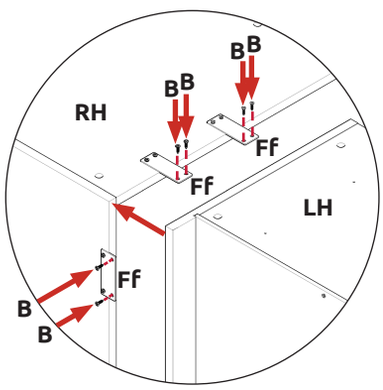

View from rear of unit

Step 8.
Align 2 x L bracket SML **(J)** combined with 2 x 5/8" screws **(B)** per bracket as shown.
Secure carcase from inside the cabinet as shown.

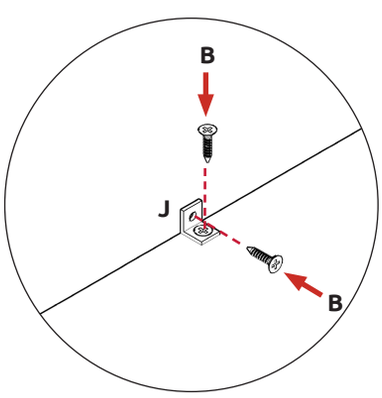

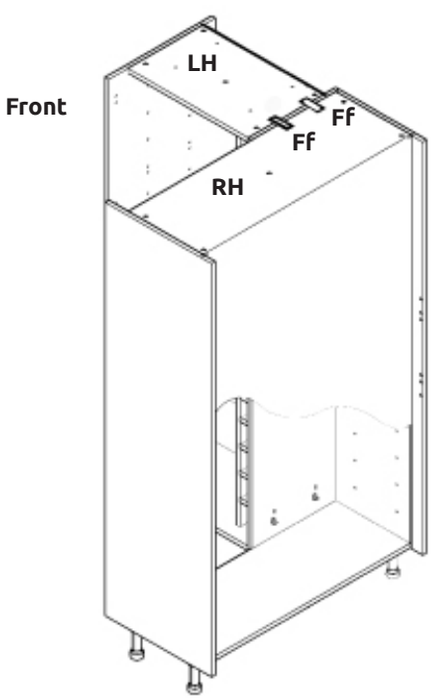

TOWER UNIT

84”, 90” & 96”
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

Step 9.

Use 2 x 5/8” screws **(B)** to secure each of the 4 x L brackets LGE **(K)** to both carcases positioned as shown.

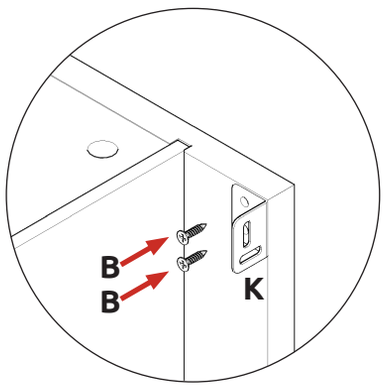

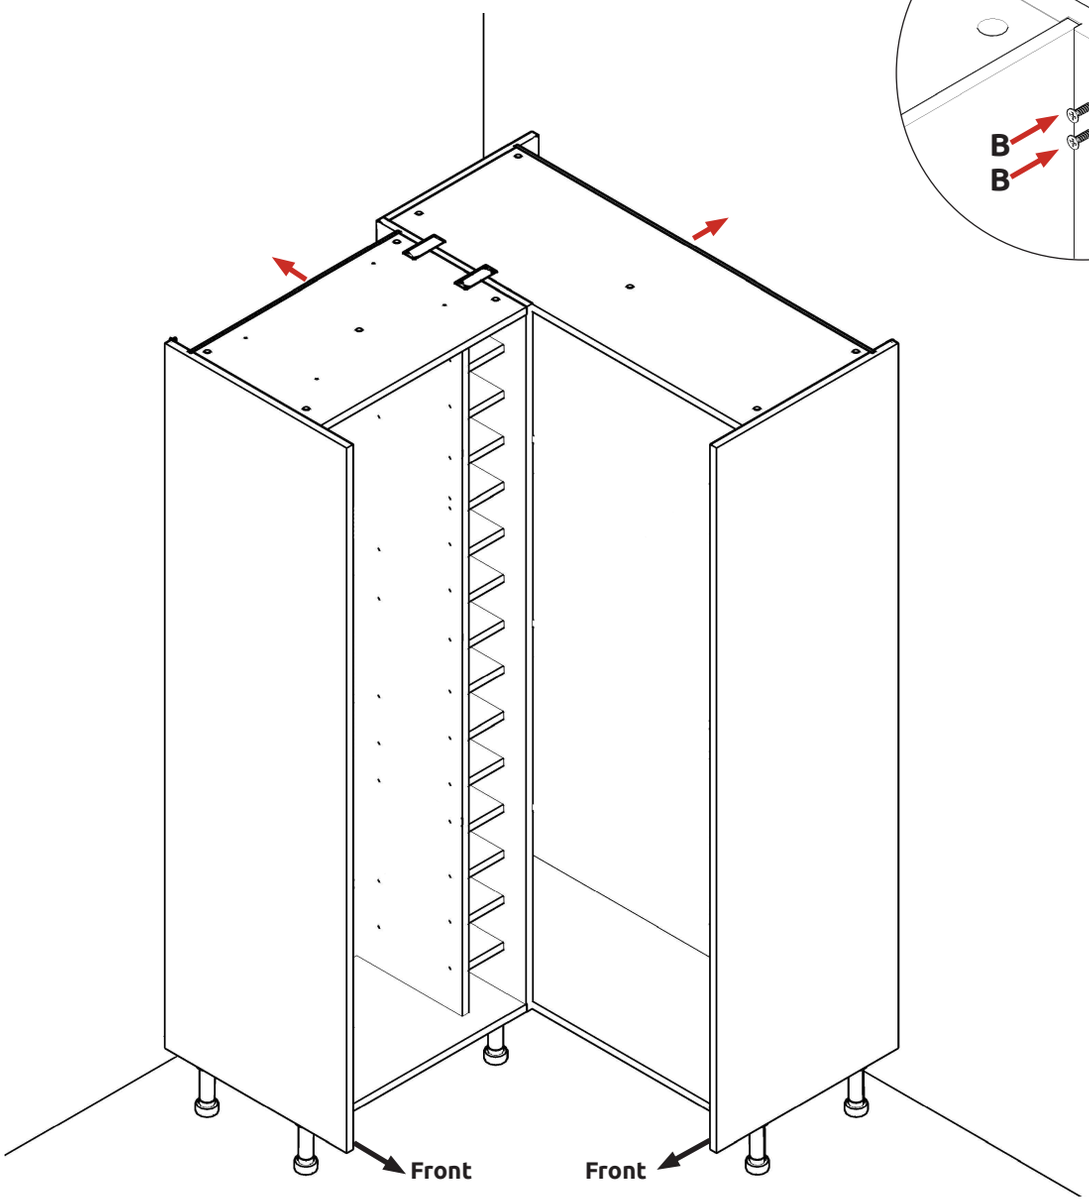

Step 10.

Screw through into the wall as shown.
Screws for fixing to walls are not provided as these vary depending on your wall material and construction. Ensure appropriate fixings for wall constructions are used.

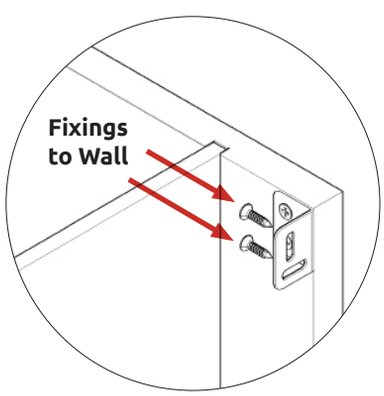

For Internal Use: CON.INS.004.001_50-WKIN00007_TOWER45WineRack_Assembly_Rev3.indd

Step 11.

When combined cabinet is secured in position, attach top Panel **(Z)**, using 4x fixing plates **(Ff)** combined with 4 x 5/8" screws **(B)** per plate, positioned as shown.

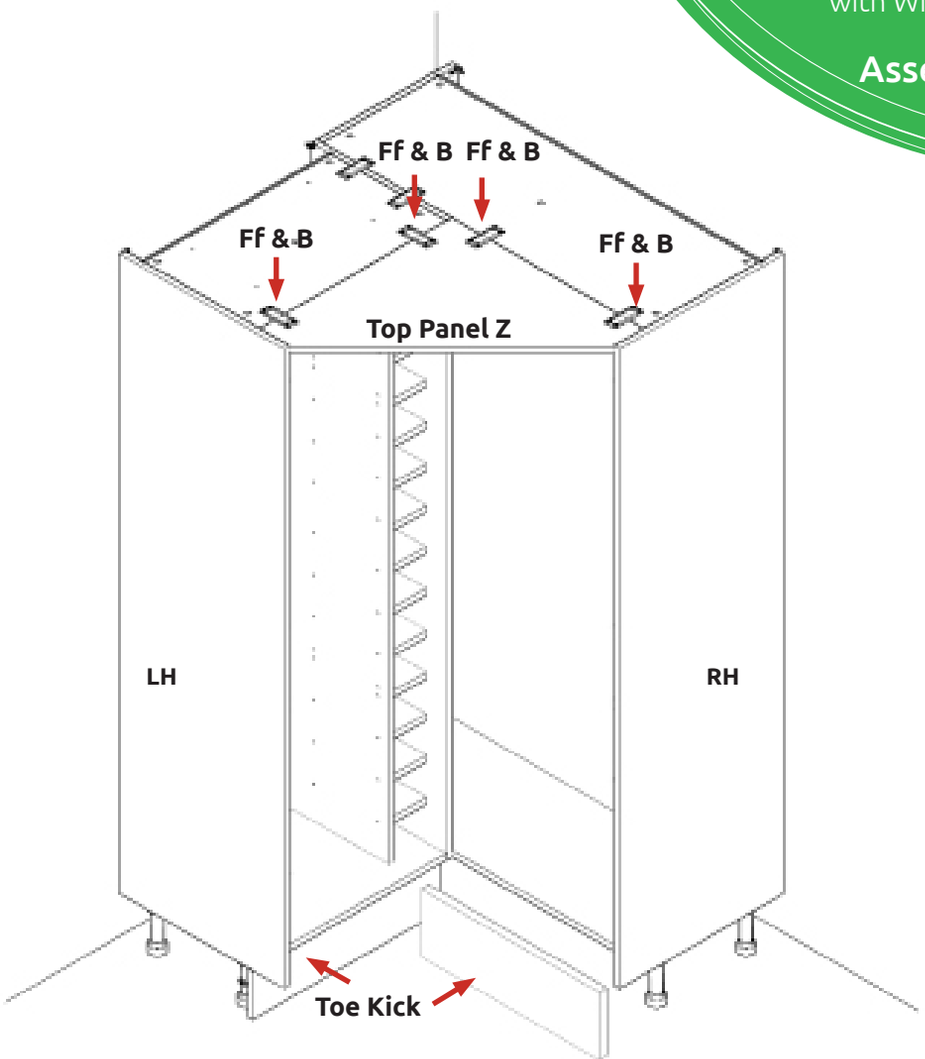

Step 12.

Measure toe kick and cut to suit the width of carcase **(LH)** and again for **(RH)**.
Mark clip positions by aligning toe kick sections to legs. Use 2 x 5/8" screws **(B)** as shown to fix clip to toe kick.
Detach the leg clip from the toe kick clip. Slide leg clip into toe kick clip as shown.

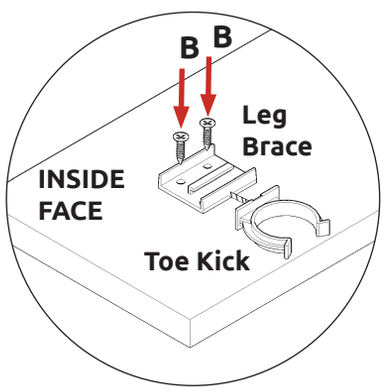

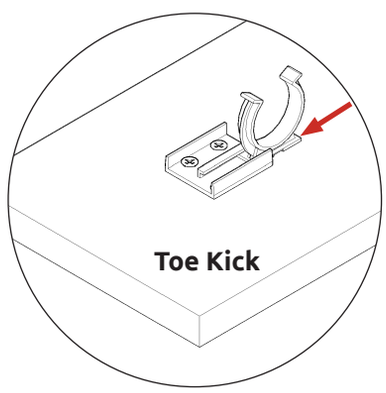

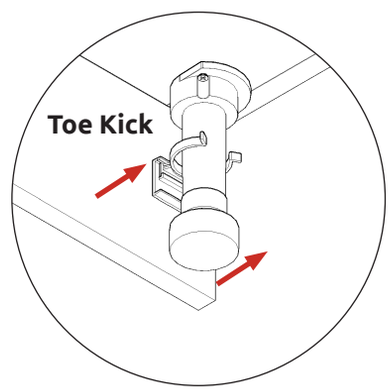

Step 13.

Secure plinth by pushing clip firmly onto legs, as shown.

TOWER UNIT

84”
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

Step 14.

Attach hinge plates onto end panels **(Y)** to suit as shown using 2 x 5/8” screws **(B)** included per plate.

Hinge side to be mounted in accordance to customer kitchen plan.

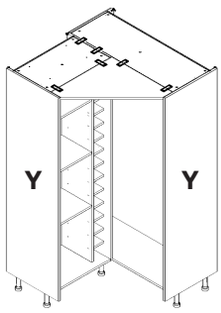

70/30 HINGE POSITION

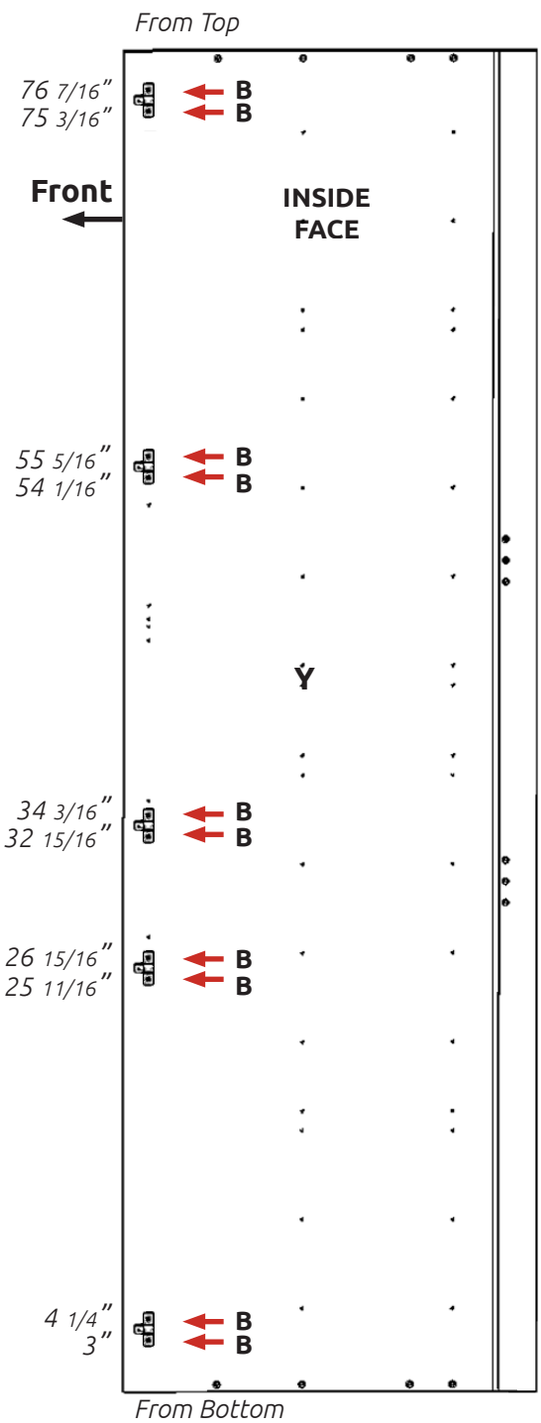

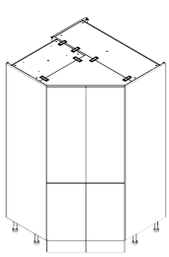

70/30

2 Door HINGE POSITION

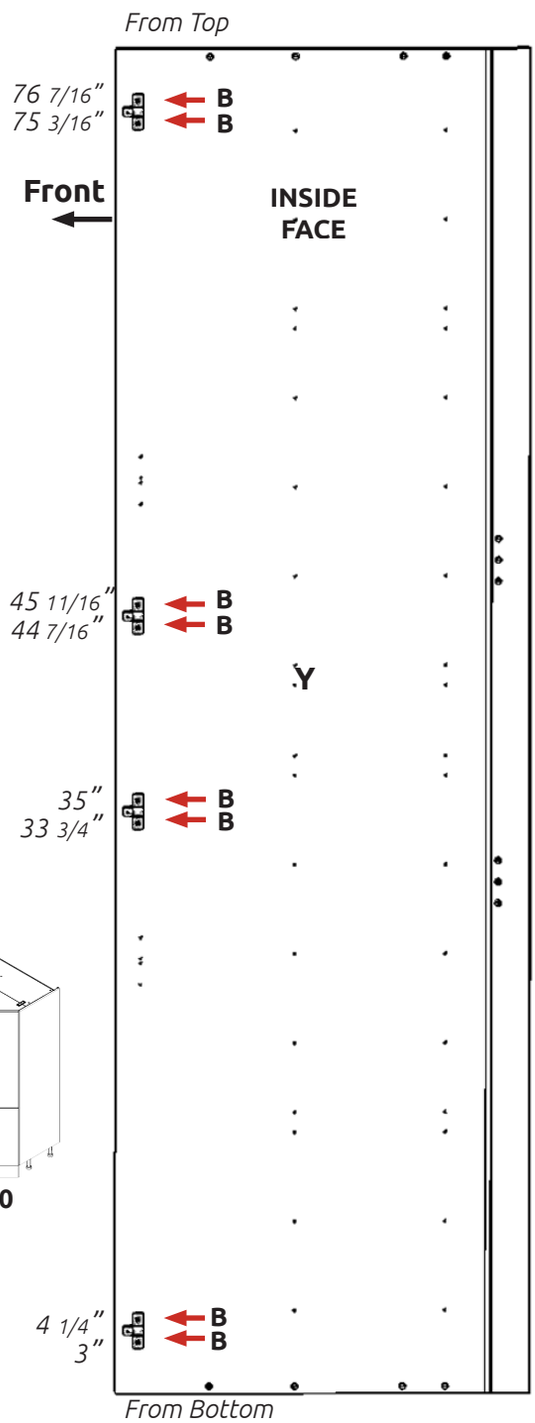

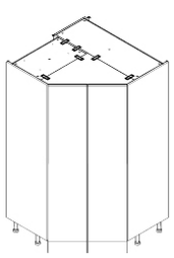

2 Dr Door

For Internal Use: CON.INS.004.001_50-WKIN00007_TOWER45WineRack_Assembly_Rev3.indd

Step 14.

Attach hinge plates onto end panels **(Y)** to suit as shown using 2 x 5/8” screws **(B)** included per plate.

Hinge side to be mounted in accordance to customer kitchen plan.

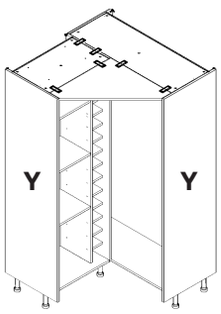

70/30 HINGE POSITION

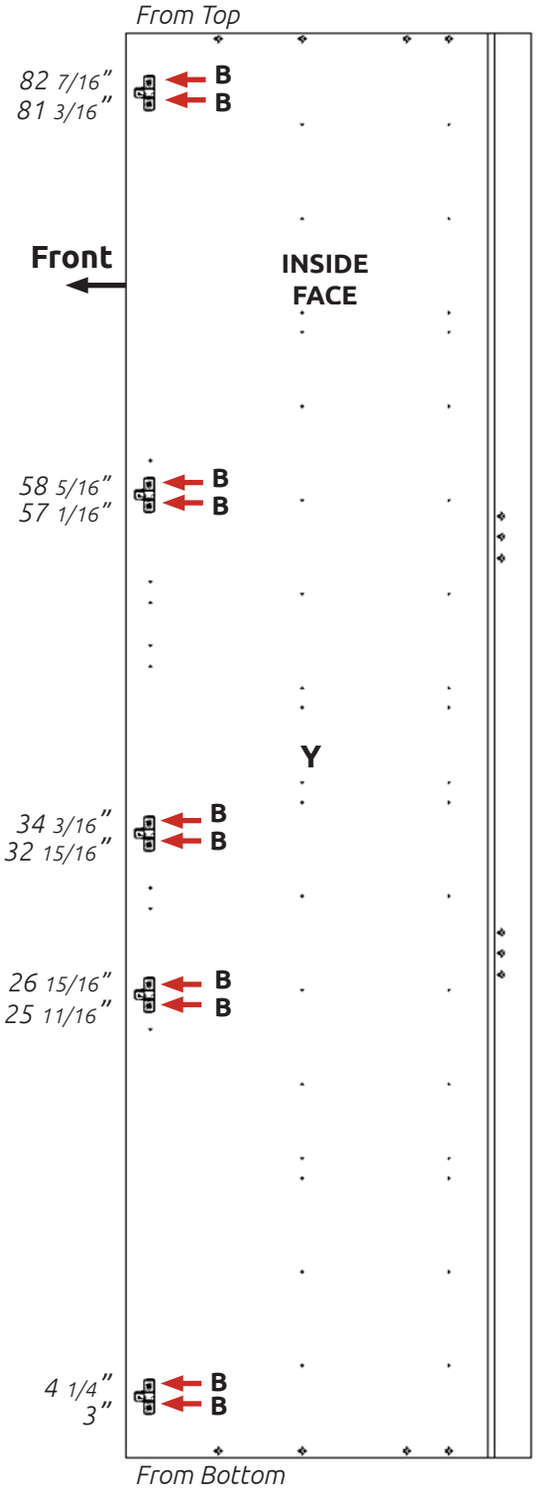

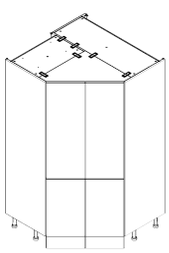

70/30

2 Door HINGE POSITION

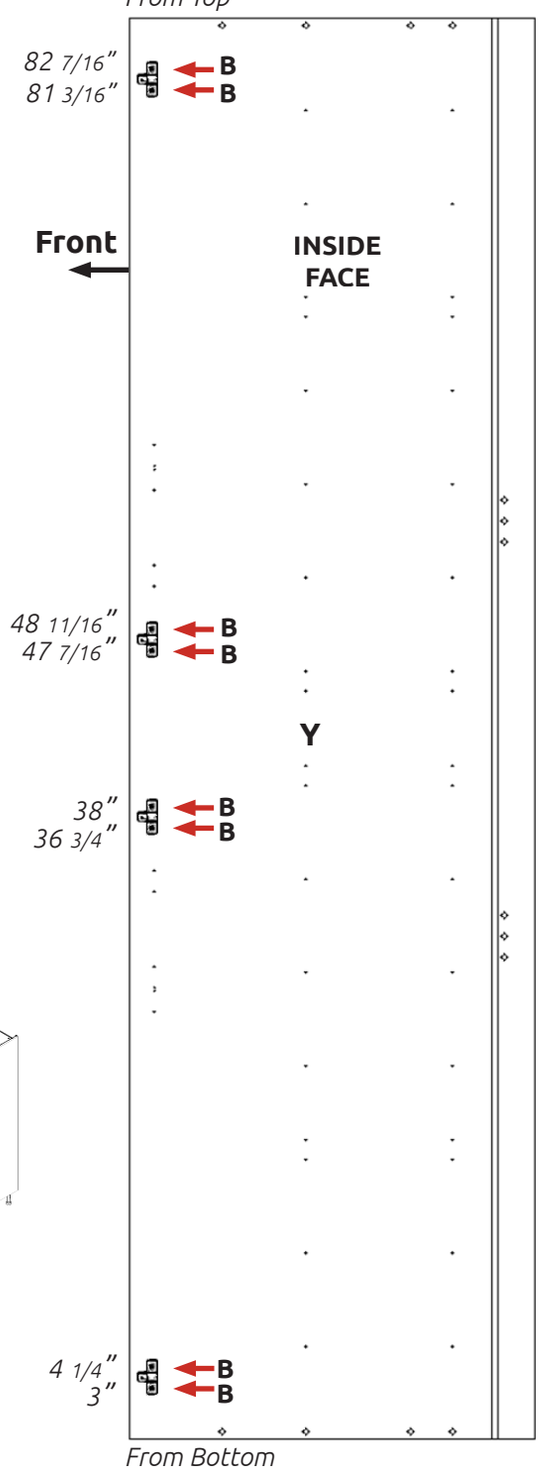

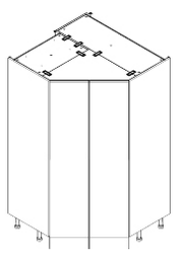

2 Dr Door

TOWER UNIT

96”
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

Step 14.

Attach hinge plates onto end panels **(Y)** to suit as shown using 2 x 5/8” screws **(B)** included per plate.

Hinge side to be mounted in accordance to customer kitchen plan.

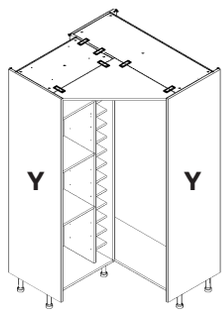

70/30 HINGE POSITION

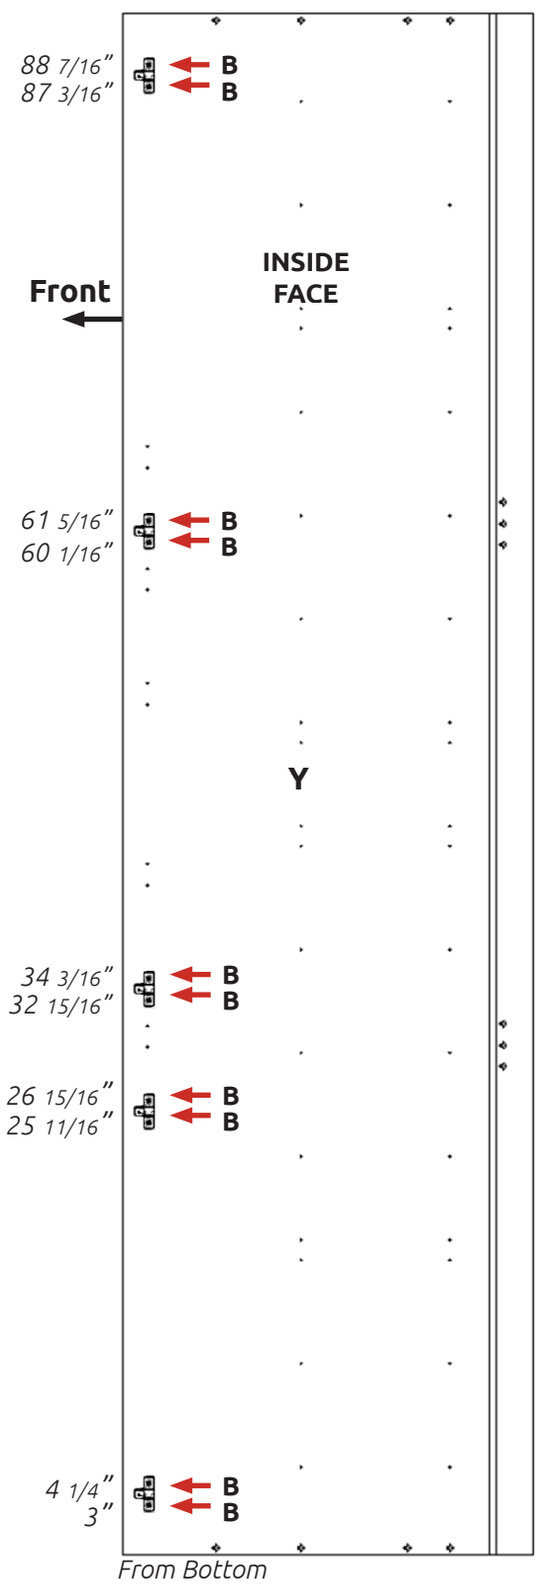

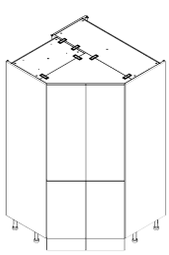

70/30

2 Door HINGE POSITION

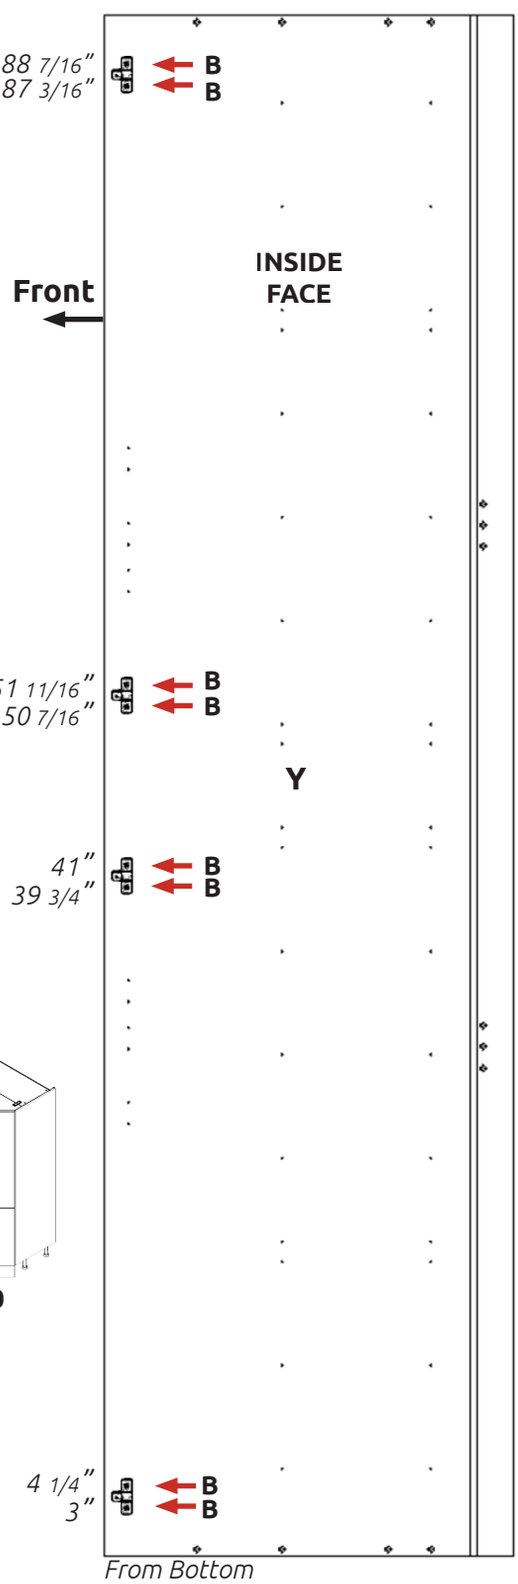

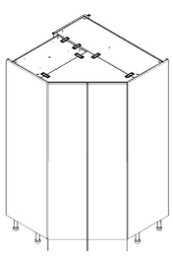

2 Dr Door

For Internal Use: CON.INS.004.001_50-WKIN00007_TOWER45WineRack_Assembly_Rev3.indd

See Customer Specific Kitchen Plan For Tower Frontals

Step 15.
Insert hinge where required in holes as shown.

Step 16.
Align doors & frontal toe kick to join together using 4 x fixing plates **(Ff)** to the back of both frontals. Ensure a 1/8” gap is maintained between each frontal once fixed together.
Screw in place using 4 x 5/8” screws **(B)** per fixing plate.

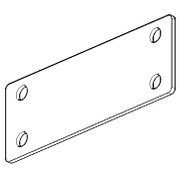

Fixing plates

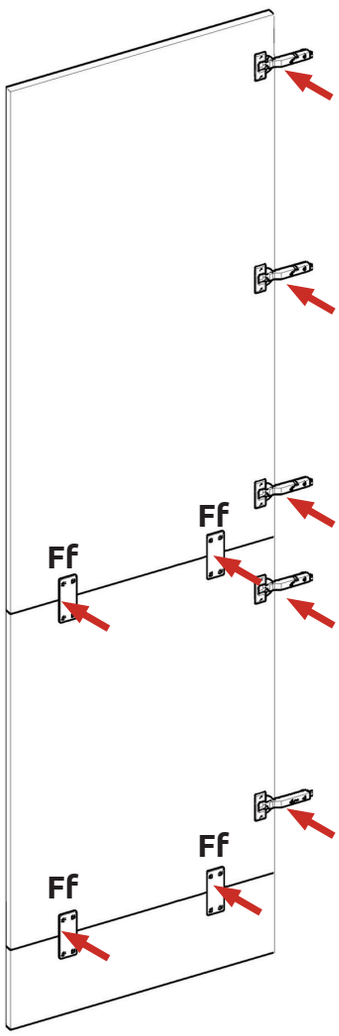

Step 17.
Secure hinges by tightening 2 x screws with hinge dowels attached. These are already positioned within the hinges.

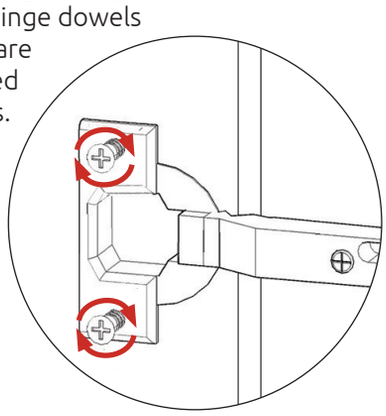

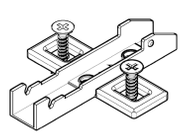

Hinge Plates

Step 18.
Adjust hinge to suit. As shown below.

FRONTAL HINGE ADJUSTMENT

To **adjust** hinge using a screw driver, tighten or loosen as required at points **1** & **2**.
Point **1** - In - Out
Point **2** - Left - Right

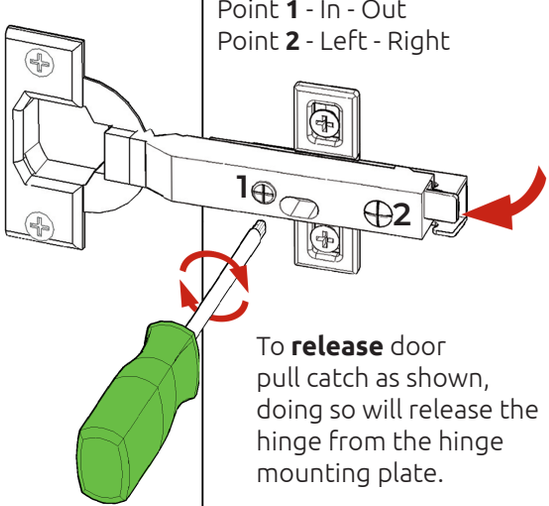

To **release** door pull catch as shown, doing so will release the hinge from the hinge mounting plate.

View from Inside of Carcase

Step 19.
Fit cover caps to hinge.
Adjust soft-close to suit.

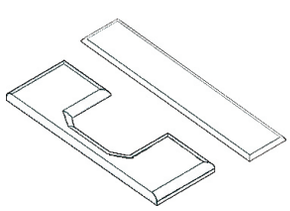

Hinge Cover Caps

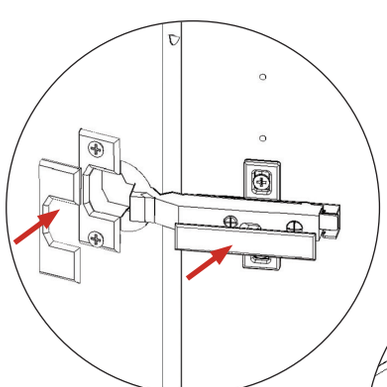

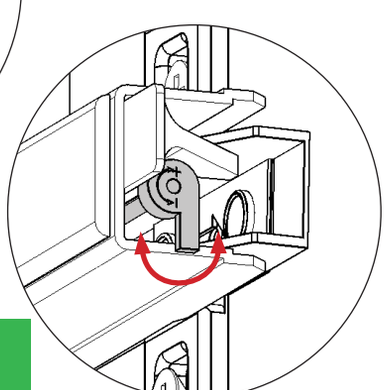

The Top and Bottom hinges **MUST** be adjusted to the **SAME STRENGTH.**

wren
KITCHENS